



AN 411

SIMS Measurement of Bulk [N] in Nitrogen-doped Cz-Si: Long Term Precision Results

May 7, 2007 (Version 3.0)

Discussion

Advanced silicon substrate products are being developed for the 90 nm node and smaller devices of the future. Nitrogen-doping during Cz-Si crystal growth is a key technology for some of these products, because this facilitates the engineering of defect properties needed for the low temperature processing at 90 nm node and smaller devices. The measurement of bulk [N] is required at the 10^{13} - $10^{14}/\text{cm}^3$ range for these advanced silicon substrate products.

The goal of the industry is to develop an FTIR measurement of the bulk [N], but achieving this at the required concentration range and acceptable precision is still a challenge. An ASTM F 2139 test method for the SIMS measurement was approved in 2001, but the actual precision of the measurement needed improvement and the test method was applicable only down to $1 \times 10^{14}/\text{cm}^3$. At Charles Evans & Associates, we have improved the SIMS measurement precision using the ASTM F 2139 test method and extended the detection capability into the $1 \times 10^{13}/\text{cm}^3$ levels. Here we present long term (20 months) precision results for three levels of nitrogen in silicon. Table 1 shows the relative one standard deviation (RSD) for each level. Figure 1 shows the long term trend chart for nitrogen concentrations of $1.7 \times 10^{14}/\text{cm}^3$, $7.3 \times 10^{13}/\text{cm}^3$, and $4.1 \times 10^{13}/\text{cm}^3$. These results show the excellent capability of our SIMS to make this measurement which can be used to calibrate reference materials for FTIR research and development, and to monitor crystal growth processes until the FTIR measurement development is successful.

Table 1. Long term RSDs for three levels of [N]

Sample	Average [N]	RSD
X	$1.7 \times 10^{14}/\text{cm}^3$	7%
Y	$7.3 \times 10^{13}/\text{cm}^3$	19%
Z	$4.1 \times 10^{13}/\text{cm}^3$	26%

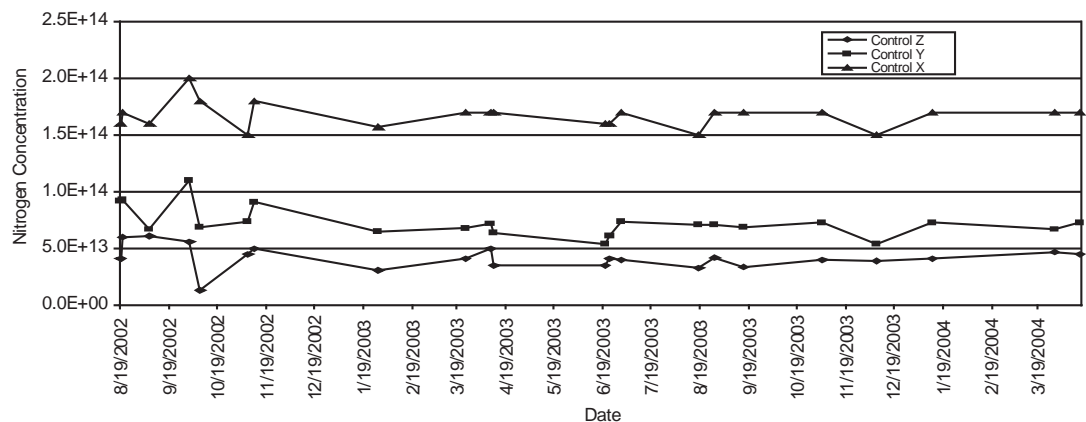


Figure 1: Long term (20 months) repeat measurements for Samples X, Y and Z.

United States Locations

Tempe, Arizona
+1 480 239 0602 info.az@eaglabs.com
+1 602 470 2655 fax

Sunnyvale, California
810 Kifer Road
+1 408 530 3500 info.ca@eaglabs.com
+1 408 530 3501 fax

1135 E Arques Avenue
+1 408 738 3033
+1 408 530 3035 fax

785 Lucerne Drive
+1 408 737 3892
+1 408 737 3916 fax

Peabody, Massachusetts
+1 978 278 9500 info.ma@eaglabs.com
+1 978 278 9501 fax

Chanhassen, Minnesota
+1 952 828 6411 info.mn@eaglabs.com
+1 952 828 6449 fax

East Windsor, New Jersey
+1 609 371 4800 info.nj@eaglabs.com
+1 609 371 5666 fax

Syracuse, New York
+1 315 431 9900 info.ny@eaglabs.com
+1 315 431 9800 fax

Raleigh, North Carolina
+1 919 829 7041 info.nc@eaglabs.com
+1 919 829 5518 fax

Round Rock, Texas
+1 512 671 9500 info.tx@eaglabs.com
+1 512 671 9501 fax

International Locations

Shanghai, China
+ 86 21 6879 6088 info.cn@eaglabs.com
+ 86 21 6879 9086 fax

Tournefeuille, France
+ 33 5 61 73 15 29 info.fr@eaglabs.com
+ 33 5 61 73 15 67 fax

Frankfurt, Germany
+ 49 (0) 693053213 info.de@eaglabs.com
+ 49 (0) 69307941 fax

Tokyo, Japan
+ 81 3 5396 0531 info.jp@eaglabs.com
+ 81 3 5396 1930 fax

HsinChu, Taiwan
+ 886 3 5632303 info.tw@eaglabs.com
+ 886 3 5632306 fax

Uxbridge, United Kingdom
+ 44 (0) 1895 811194 info.uk@eaglabs.com
+ 44 (0) 1895 810350 fax